




# SmartGlass International

## Remote Control Wiring Diagram

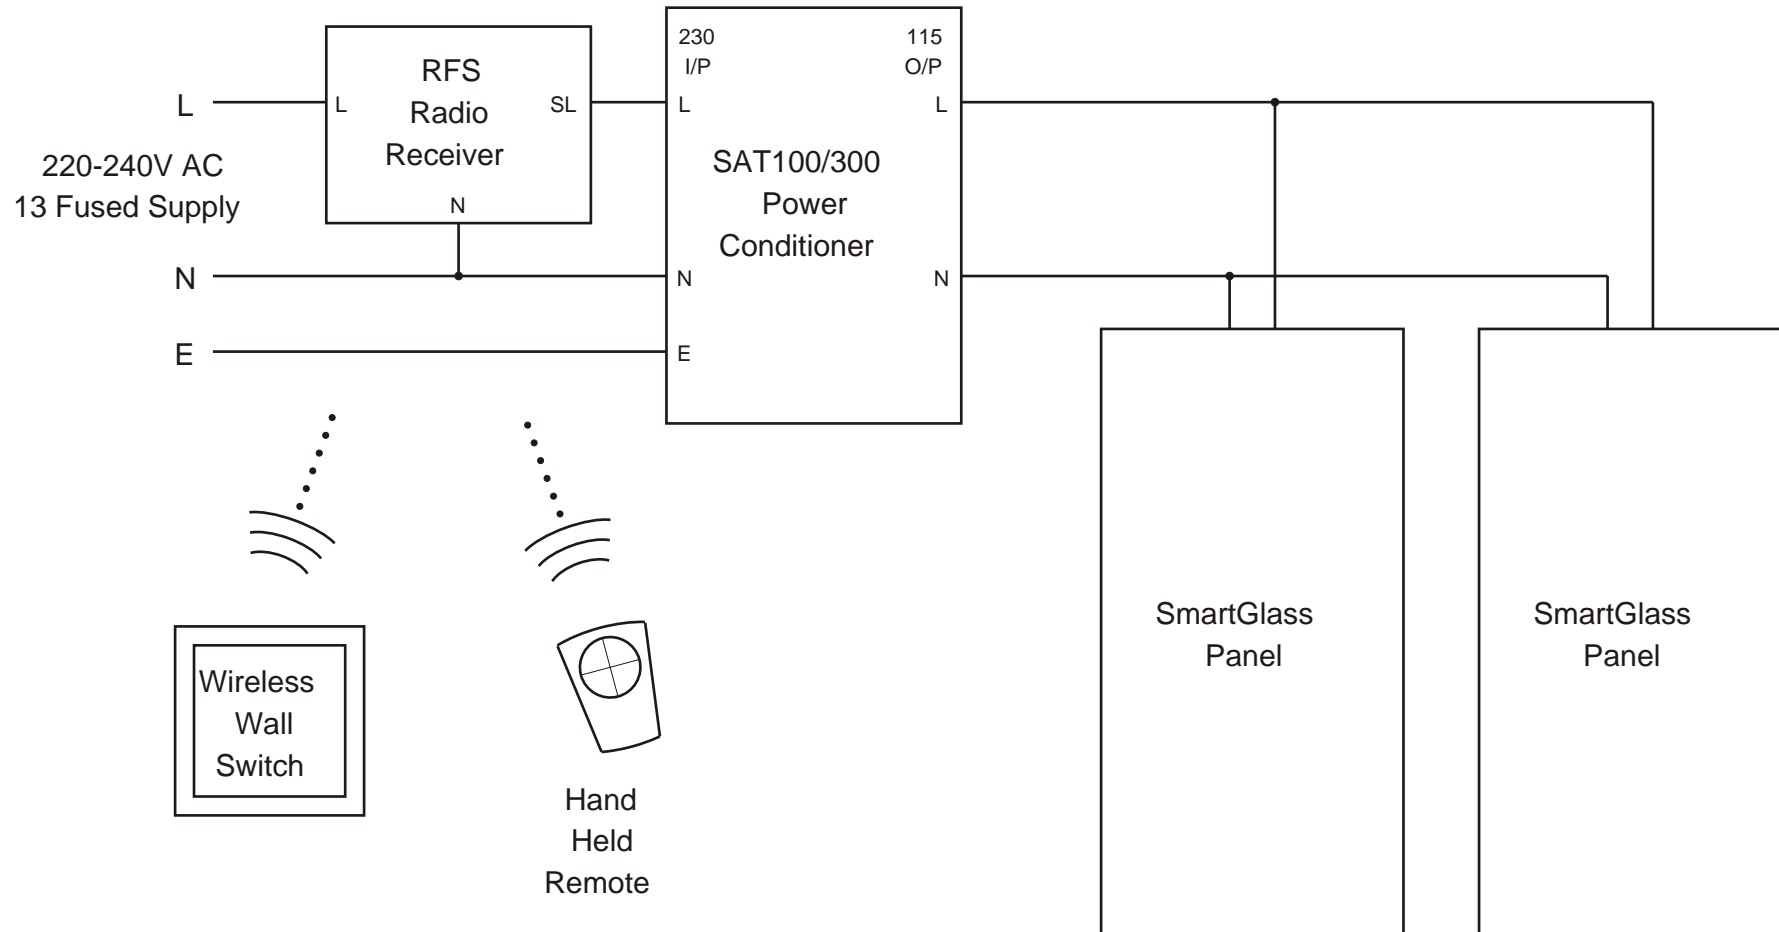

Please Note: The Power Conditioner has a built in fuse and must be located in an accessible position